



WORK FOR THE BEST IMAGE

The G&G brand owner, Ninestar Image Tech Limited is a
wholly owned subsidiary of Ninestar Corporation
Stock Code: 002180



Ninestar Image Tech Limited

Address: No.3883, Zhuhai Avenue, Xiangzhou District, Zhuhai Guangdong, P.R. China 519060

INKJET CARTRIDGES


Most Trustful Inkjet Patented Technology Leader

Lower printing cost
water proof and UV resistance
clear & sharp and vivid printing performance
keep fadeless for 100 years under normal
atmospheric conditions with
EverBrite Ink.

www.ggimage.com Info@ggimage.com



KEY PATENT TECHNOLOGY FOOTPRINT-INKJET

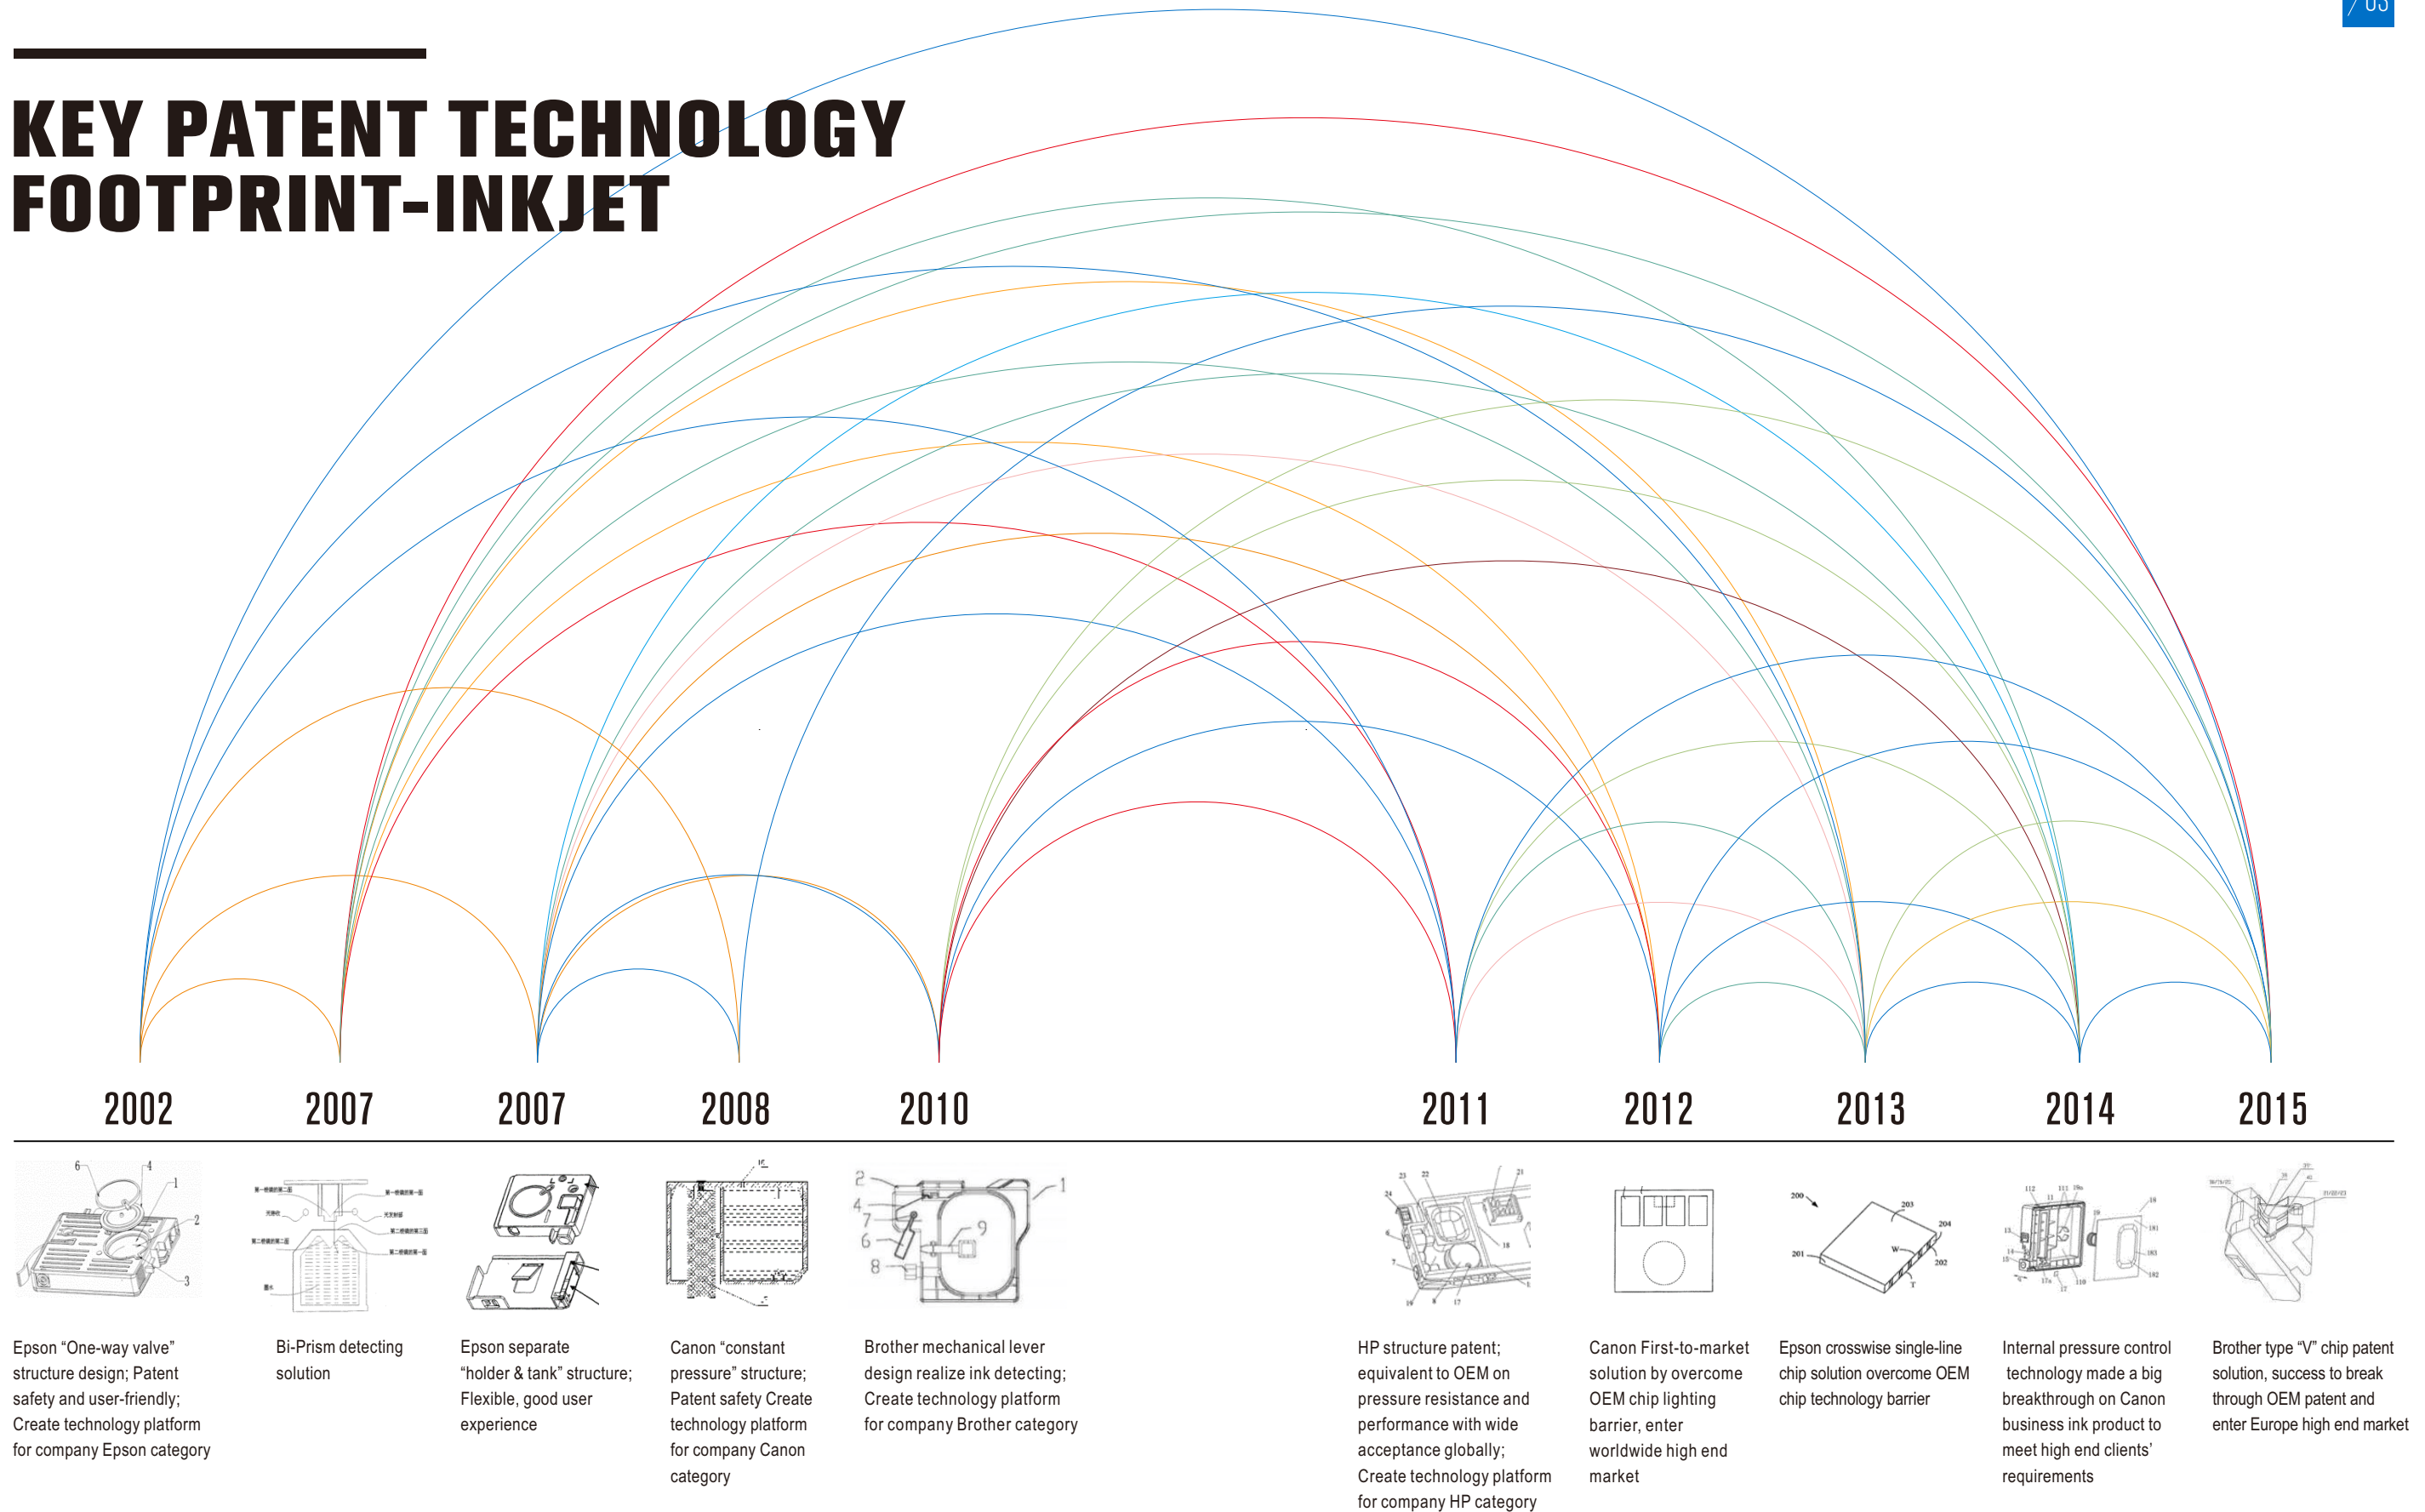

For use in: CANON

Ninestar Model No.	OEM Model No.	Ink Type	Color	For use in
NP-C-0220BK	PGI-220BK	P	●	Canon PIXMA MP540/560/620/620B/630/640/980/990;MX860/870;iP3600/4600/4700
NP-C-0221BK	CLI-221BK	D	●	
NP-C-0221C	CLI-221C		●	
NP-C-0221M	CLI-221M		●	
NP-C-0221Y	CLI-221Y		●	
NP-C-0221GY	CLI-221GY		●	Canon PIXMA MP980
NP-C-0520BK	PGI-520BK	P	●	Canon PIXMA MP540/550/560/620/630/640/980/990;MX860/870;iP3600/4600/4700
NP-C-0521BK	CLI-521BK	D	●	
NP-C-0521C	CLI-521C		●	
NP-C-0521M	CLI-521M		●	
NP-C-0521Y	CLI-521Y		●	
NP-C-0521GY	CLI-521GY		●	Canon PIXMA MP980/990
NP-C-0820BK	PGI-820BK	P	●	Canon PIXMA iP3680/4760/4680;MP545/558/568/638/648/980/996;MX347/868/876
NP-C-0821BK	CLI-821BK	D	●	
NP-C-0821C	CLI-821C		●	
NP-C-0821M	CLI-821M		●	
NP-C-0821Y	CLI-821Y		●	
NP-C-0821GY	CLI-821GY		●	Canon PIXMA MP980
NP-C-0125BK	PGI-125BK	P	●	Canon PIXMA iP4810;MG5210/6110
NP-C-0126BK	CLI-126BK	D	●	
NP-C-0126C	CLI-126C		●	
NP-C-0126M	CLI-126M		●	
NP-C-0126Y	CLI-126Y		●	
NP-C-0126GY	CLI-126GY		●	Canon PIXMA MG6110
NP-C-0225BK	PGI-225BK	P	●	Canon PIXMA iP4820/4920;iX6520;MG5120/5220/5320/6120/8120;MX722/882
NP-C-0226BK	CLI-226BK	D	●	
NP-C-0226C	CLI-226C		●	
NP-C-0226M	CLI-226M		●	
NP-C-0226Y	CLI-226Y		●	
NP-C-0226GY	CLI-226GY		●	Canon PIXMA MG6120/8120
NP-C-0425BK	PGI-425BK	P	●	Canon PIXMA iP4840;MG5140/5240/6140/8140
NP-C-0426BK	CLI-426BK	D	●	
NP-C-0426C	CLI-426C		●	
NP-C-0426M	CLI-426M		●	
NP-C-0426Y	CLI-426Y		●	
NP-C-0426GY	CLI-426GY		●	Canon PIXMA MG6140/8140
NP-C-0525BK	PGI-525BK	P	●	Canon PIXMA iP4850/4950;iX6550;MG5150/5250/5350/6150/6250/8150/8250;MX885/895
NP-C-0526BK	CLI-526BK	D	●	
NP-C-0526C	CLI-526C		●	
NP-C-0526M	CLI-526M		●	
NP-C-0526Y	CLI-526Y		●	
NP-C-0526GY	CLI-526GY		●	Canon PIXMA MG6150/6250/8150/8250
NP-C-0725BK	GLI-725BK	P	●	Canon PIXMA iP4870;MG5170/5270/6170/8170
NP-C-0726BK	CLI-726BK	D	●	
NP-C-0726C	CLI-726C		●	
NP-C-0726M	CLI-726M		●	
NP-C-0726Y	CLI-726Y		●	
NP-C-0726GY	CLI-726GY		●	Canon PIXMA MG6170/8170
NP-C-0250XLBK	PGI-250XLPGBK	P	●	Canon PIXMA MG5420/5620/6320/6620/7520;MX922;iP7220
NP-C-0251XLBK	CLI-251XLBK	D	●	
NP-C-0251XLC	CLI-251XLC		●	
NP-C-0251XLM	CLI-251XLM		●	
NP-C-0251XLY	CLI-251XLY		●	
NP-C-0251XLGY	CLI-251XLGY		●	Canon PIXMA MG6320/7520

For use in: CANON

Ninestar Model No.	OEM Model No.	Ink Type	Color	For use in
NP-C-0450XLBK	PGI-450XLBK	P	●	Canon PIXMA MG5440/5540/6340/6440/7140;MX924;iP7240
NP-C-0451XLBK	CLI-451XLBK	D	●	
NP-C-0451XLC	CLI-451XLC		●	
NP-C-0451XLM	CLI-451XLM		●	
NP-C-0451XLY	CLI-451XLY		●	
NP-C-0451XLGY	CLI-451XLGY		●	Canon PIXMA MG6340/7140
NP-C-0550XLBK	PGI-550XLBK	P	●	Canon PIXMA MG5450/5550/5650/6350/6450/6650/7150/7550;iP7250/8750;MX725/925;iX6850
NP-C-0551XLBK	CLI-551XLBK	D	●	
NP-C-0551XLC	CLI-551XLC		●	
NP-C-0551XLM	CLI-551XLM		●	
NP-C-0551XLY	CLI-551XLY		●	
NP-C-0551XLGY	CLI-551XLGY		●	Canon PIXMA MG6350/7150/7550;iP8750
NP-C-0650XLBK	PGI-650XLBK	P	●	Canon PIXMA MG5460/6360/7560;MX926;iP7260
NP-C-0651XLBK	CLI-651XLBK	D	●	
NP-C-0651BK	CLI-651BK		●	
NP-C-0651XLC	CLI-651XLC		●	
NP-C-0651XLM	CLI-651XLM		●	
NP-C-0651XLY	CLI-651XLY		●	Canon PIXMA MG6360/7560
NP-C-0651XLGY	CLI-651XLGY		●	Canon PIXMA MG5470/6370;MX927;iP7270
NP-C-0750XLBK	PGI-750XLBK	P	●	
NP-C-0751XLBK	CLI-751XLBK	D	●	
NP-C-0751XLC	CLI-751XLC		●	
NP-C-0751XLM	CLI-751XLM		●	
NP-C-0751XLY	CLI-751XLY		●	
NP-C-0751XLGY	CLI-751XLGY		●	Canon PIXMA MG6370
NP-C-0005BK	PGI-5BK	P	●	Canon PIXMA iP3300/3500/4200/4200Refurbished/4500/5200/5200R/5300;MP500/510/520/530/600/610/800/800R/810/830/950/970;iX5000/4000;MX700/850
NP-C-0008BK	CLI-8BK	D	●	
NP-C-0008C	CLI-8C	D	●	
NP-C-0008M	CLI-8M	D	●	
NP-C-0008Y	CLI-8Y	D	●	
NP-C-0008PC	CLI-8PC	D	●	Canon PIXMA Pro-100
NP-C-0008PM	CLI-8PM	D	●	
NP-C-0008G	CLI-8G	D	●	
NP-C-0008R	CLI-8R	D	●	
NP-C-0042BK	CLI-42BK	D	●	
NP-C-0042C	CLI-42C	D	●	Canon MAXIFY MB2020/MB2320
NP-C-0042M	CLI-42M	D	●	
NP-C-0042Y	CLI-42Y	D	●	
NP-C-0042PC	CLI-42PC	D	●	
NP-C-0042PM	CLI-42PM	D	●	
NP-C-0042GY	CLI-42GY	D	●	Canon MAXIFY MB5320/MB5020/iB4020
NP-C-0042LGY	CLI-42LGY	D	●	
NP-C-1200XLBK	PGI-1200XLBK	P	●	
NP-C-1200XLC	PGI-1200XLC	P	●	
NP-C-1200XLM	PGI-1200XLM	P	●	
NP-C-1200XLY	PGI-1200XLY	P	●	Canon MAXIFY MB2050/MB2350
NP-C-2200XLBK	PGI-2200XLBK	P	●	
NP-C-2200XLC	PGI-2200XLC	P	●	
NP-C-2200XLM	PGI-2200XLM	P	●	
NP-C-2200XLY	PGI-2200XLY	P	●	
NP-C-1500XLBK	PGI-1500XLBK	P	●	
NP-C-1500XLC	PGI-1500XLC	P	●	
NP-C-1500XLM	PGI-1500XLM	P	●	
NP-C-1500XLY	PGI-1500XLY	P	●	



For use in: CANON

Ninestar Model No.	OEM Model No.	Ink Type	Color	For use in
NP-C-0770XLBK	PGI-770XLBK	P	●	Canon PIXMA MG5770/6870/7770
NP-C-0771XLBK	CLI-771XLBK	D	●	
NP-C-0771XLC	CLI-771XLC	D	●	
NP-C-0771XLM	CLI-771XLM	D	●	
NP-C-0771XLY	CLI-771XLY	D	●	
NP-C-0771XLGY	CLI-771XLGY	D	●	Canon PIXMA MG7770
NP-C-0970XLBK	PGI-970XLBK	P	●	Canon PIXMA MG5790/5795/7790
NP-C-0971XLBK	CLI-971XLBK	D	●	
NP-C-0971XLC	CLI-971XLC	D	●	
NP-C-0971XLM	CLI-971XLM	D	●	
NP-C-0971XLY	CLI-971XLY	D	●	
NP-C-0971XLGY	CLI-971XLGY	D	●	Canon PIXMA MG7790
NP-R-0691BK	T069120	D	●	Epson Stylus C120/CX5000/CX6000/CX7000F/ CX7400/CX7450/CX8400/CX9400FAX/CX9475FAX; NX100/NX105/NX115/NX200/NX215/NX300/NX305/ NX400/NX415/NX510/NX515;WorkForce 30/40/310/ 500/600/610/1100
NP-R-0692C	T069220	D	●	
NP-R-0693M	T069320	D	●	
NP-R-0694Y	T069420	D	●	
NP-R-0711BK	C13T07114011	D	●	Epson Stylus Photo D78/D120/DX4000/DX4050/ DX5000/DX5050/DX6000/DX6050/DX7450/DX8450; Stylus D92/DX4400/DX4450/DX7000F/DX7400/ DX8400/S20/S21/SX100/SX105/SX110/SX115/SX200 /SX205/SX210/SX215/SX218/SX400/SX405/SX410/ SX415/SX510W/SX515W/SX600FW/SX610FW; Stylus Office B40W/BX300F/BX310FN/BX600FW/ BX610FW
NP-R-0712C	C13T07124011	D	●	
NP-R-0713M	C13T07134011	D	●	
NP-R-0714Y	C13T07144011	D	●	
NP-R-0731BK	T073190	P	●	Epson Stylus C79/C90/C92/C110/CX3900/CX3905/ CX4900/CX4905/CX5500/CX5501/CX5505/CX5510/ CX5600/CX5900/CX6900F/CX7300/CX7310/ CX8300/CX9300FAX
NP-R-0732C	T073290	P	●	
NP-R-0733M	T073390	P	●	
NP-R-0734Y	T073490	P	●	
NP-C-0029PBK/NP-C-0029C/ NP-C-0029M/NP-C-0029Y/ NP-C-0029PC/NP-C-0029PM/ NP-C-0029GY/NP-C-0029DGY/ NP-C-0029MBK/NP-C-0029LGY/ NP-C-0029R/NP-C-0029CO	PGI-29PBK/PGI-29C PGI-29M/PGI-29Y PGI-29PC/PGI-29PM PGI-29GY/PGI-29DGY PGI-29MBK/PGI-29LGY PGI-29R/PGI-29CO	P	●●●●● ●●●●● ●●●●●	Canon pixma PRO-1

Ninestar Model No.	OEM Model No.	Ink Type	Color	For use in
NP-R-0781BK	T078120	D	●	Epson Stylus R260/R280/R380/RX580/RX680; Stylus Photo RX595;Stylus Artisan50
NP-R-0782C	T078220	D	●	
NP-R-0783M	T078320	D	●	
NP-R-0784Y	T078420	D	●	
NP-R-0785LC	T078520	D	●	
NP-R-0786LM	T078620	D	●	
NP-R-0801BK	T080140	D	●	Epson Stylus Photo R265/R285/R360/RX560/RX585 /RX685/P50/PX650/PX660/PX700W/PX710W/ PX720WD/PX800FW/PX810FW/PX830FWD
NP-R-0802C	T080240	D	●	
NP-R-0803M	T080340	D	●	
NP-R-0804Y	T080440	D	●	
NP-R-0805LC	T080540	D	●	
NP-R-0806LM	T080640	D	●	

For use in: Epson

Ninestar Model No.	OEM Model No.	Ink Type	Color	For use in
NP-R-0821BK	T082190	D	●	Epson Stylus Photo T50/T59/R270/R290/R295/R390/ RX590/RX610/RX615/TX650/RX690/TX700W/ TX710W/TX800FW/TX810FW/TX820FWD/1410; Artisan 725/837
NP-R-0822C	T082290	D	●	
NP-R-0823M	T082390	D	●	
NP-R-0824Y	T082490	D	●	
NP-R-0825LC	T082590	D	●	
NP-R-0826LM	T082690	D	●	Epson Stylus Photo P50/PX650/PX660/PX700W/ PX710W/PX720WD/PX800FW/PX810FW/ PX830FWD/1400
NP-R-0791BK	T0791	D	●	
NP-R-0792C	T0792	D	●	
NP-R-0793M	T0793	D	●	
NP-R-0794Y	T0794	D	●	
NP-R-0795LC	T0795	D	●	Epson Stylus T26/T27/C91/TX106/TX109/TX117/ TX119/CX4300
NP-R-0796LM	T0796	D	●	
NP-R-0921BK	T0921	P	●	
NP-R-0922C	T0922	P	●	
NP-R-0923M	T0923	P	●	
NP-R-0924Y	T0924	P	●	Epson Stylus CX4400/CX4450/CX7400/NX100/ NX105/NX110/NX115/NX200/NX215/NX300/NX305/ NX400/NX415
NP-R-0881BK	T0881	D	●	
NP-R-0882C	T0882	D	●	
NP-R-0883M	T0883	D	●	
NP-R-0884Y	T0884	D	●	
NP-R-0870GO/0871PBK/ 0872C/0873M/0874Y/ 0877R/0878MBK/0879OR	T0870/T0871/T0872/ T0873/T0874/T0877/ T0878/T0879	D/P	○ ● ● ● ● ● ● ● ● ●	Epson Stylus Photo R1900
NP-R-0711BK	T0711H	D	●	Epson Stylus D120/DX7400/DX7450/DX8400/ DX8450/SX210/SX410/SX415/SX515W/SX600FW/ SX610FW;Stylus Office BX300F/BX310FN/BX600FW /B1100
NP-R-0731BK	T0731H	P	●	Epson Stylus C110/TX200/TX210/TX400/TX410/ TX600FW/CX4900/CX7300/CX8300/CX9300FAX; Stylus Office T30/T1100/TX220/TX300F
NP-R-0891BK	T0891	P	●	Epson Stylus S20/S21/SX100/SX105/SX110/SX115/ SX200/SX205/SX210/SX215/SX218/SX400/SX405/ SX410/SX415/SX515W/SX600FW/SX610FW; Stylus Office BX300F/BX3450F
NP-R-0892C	T0892	P	●	
NP-R-0893M	T0893	P	●	
NP-R-0894Y	T0894	P	●	
NP-R-1151BK	C13T115120	D	●	Epson Stylus Office T33/TX515FN
NP-R-1171BK	C13T117120	P	●	Epson Stylus T23/T24/TX105/TX115
NP-R-1051BK	C13T105150	P	●	Epson Stylus C79/C90/C92/C110/CX3900/CX3905/ CX4900/CX4905/CX5500/CX5501/CX5505/CX5600/ CX5900/CX6900F/CX7300/CX7310/CX8300/ CX9300Fax/T10/T11/T13/T20/T20E/T21/TX100/ TX101/TX102/TX103/TX110/TX111/TX112/TX113/ TX121/TX200/TX203/TX209/TX210/TX213/TX219/ TX220/TX400/TX409/TX410/TX419/TX510FN/TX550/ TX600FW;Stylus Office T30/TX300F
NP-R-1052C	C13T105250	P	●	
NP-R-1053M	C13T105350	P	●	
NP-R-1054Y	C13T105450	P	●	
NP-R-1091BK	T1091	P	●	Epson ME30/300;ME Office 70/80W/360/510/520/ 1100/600F/700FW
NP-R-1092C	T1092	D	●	
NP-R-1093M	T1093	D	●	
NP-R-1094Y	T1094	D	●	
NP-R-1191BK	T1191	P	●	Epson ME Office 70/80W/1100/700FW
NP-R-1031BK	T1031	P	●	Epson Stylus Office T40W/TX600FW/TX610FW
NP-R-1032C	T1032	P	●	Epson Stylus Office T30/T40W/TX600FW/ TX610FW/T1100; Epson Stylus Office TX515FN
NP-R-1033M	T1033	P	●	
NP-R-1034Y	T1034	P	●	
NP-R-1001BK	T1001	P	●	Epson Stylus Office B40W/BX600FW/BX610FW; Stylus SX510W/SX515W/SX600FW/SX610FW
NP-R-1002C	T1002	P	●	Epson Stylus Office B40W/BX310FN/BX600FW/ BX610FW/B1100;Stylus SX510W/SX515W/ SX600FW/SX610FW
NP-R-1003M	T1003	P	●	
NP-R-1004Y	T1004	P	●	
NP-R-1590GO/NP-R-1591PBK/ NP-R-1592C/NP-R-1593M/ NP-R-1594Y/NP-R-1597R/ NP-R-1598MBK/NP-R-1599OR	T1590/T1591/T1592/T1593/ T1594/T1597/T1598/T1599	D/P	○ ● ● ● ● ● ● ● ● ●	EPSON Stylus Photo R2000

For use in: Epson

Ninestar Model No.	OEM Model No.	Ink Type	Color	For use in
NP-R-1231BK	T1231	P	●	Epson ME Office 80W/700FW
NP-R-1232C	T1232	P	●	Epson ME Office 80W/700FW/1100
NP-R-1233M	T1233	P	●	
NP-R-1234Y	T1234	P	●	
NP-R-1281BK	T1281	P	●	Epson Stylus Office BX305F/BX305FW;Stylus S22/ SX125/SX130/SX230/SX235W/SX420W/SX425W/ SX435W/SX440W/SX445W
NP-R-1282C	T1282	P	●	
NP-R-1283M	T1283	P	●	
NP-R-1284Y	T1284	P	●	
NP-R-1291BK	T1291	P	●	Epson Stylus Office B42WD/BX305F/BX305FW/ BX320FW/BX525WD/BX625FWD/BX635FWD/ BX925FWD/BX935FWD;Stylus SX230/SX235W/ SX420W/SX425W/SX435W/SX440W/SX445W/ SX525WD/SX535WD/SX620FW; WorkForce WF-7015/7515/7525
NP-R-1292C	T1292	P	●	
NP-R-1293M	T1293	P	●	
NP-R-1294Y	T1294	D	●	
NP-R-1271BK	T1271	P	●	Epson WorkForce 60/545/630/633/635/645/840/845/ WF-7510;Stylus NX625
NP-R-1272C	T1272	P	●	
NP-R-1273M	T1273	P	●	
NP-R-1274Y	T1274	P	●	Epson Stylus NX125/NX230/NX330/NX420; WorkForce 323/325/435
NP-R-1241BK	T1241	P	●	
NP-R-1242C	T1242	P	●	
NP-R-1243M	T1243	P	●	
NP-R-1244Y	T1244	P	●	Epson WorkForce 320/323/325/520;Stylus Nx125/ NX230/NX420/NX625
NP-R-1251BK	T1251	P	●	
NP-R-1252C	T1252	P	●	
NP-R-1253M	T1253	P	●	
NP-R-1254Y	T1254	P	●	Epson WorkForce 60/435/520/545/630/633/635/645/ 840/845/WF-7510
NP-R-1261BK	T1261	P	●	
NP-R-1262C	T1262	P	●	
NP-R-1263M	T1263	P	●	
NP-R-1264Y	T1264	P	●	Epson WorkForce K101
NP-R-1361BK	T1361	P	●	Epson Stylus T25/TX123/TX125/TX135
NP-R-1351BK	T1351	P	●	Epson Stylus N11/NX125/NX230/NX420; WorkForce 320/325/435;Epson Stylus T12/ T22/TX120/TX129/TX235/TX420W; Epson Stylus TX235W/TX420W; Stylus Office TX320F;Epson Stylus T22/ TX120;Epson Stylus Office TX320F
NP-R-1331BK	T1331	P	●	
NP-R-1332C	T1332	P	●	
NP-R-1333M	T1333	P	●	
NP-R-1334Y	T1334	P	●	Epson Stylus N11/NX125/NX230/NX420; WorkForce 320/325/435;Epson Stylus T12/ T22/TX120/TX129/TX235/TX420W/TX430W; Epson Stylus T22/T25/TX123/TX125/TX135/TX235W/ TX420W;Stylus Office TX320F;Epson Stylus TX120;Epson Stylus Office TX320F
NP-R-1371BK	T1371	P	●	
NP-R-1301BK	T1301	P	●	Epson K100/K200
NP-R-1302C	T1302	P	●	Epson Stylus Office B42WD/BX525WD/BX625FWD/ BX635FWD/BX925FWD/BX935FWD/SX525WD/ SX620FW;WorkForce WF-7015;Stylus SX535WD
NP-R-1303M	T1303	P	●	
NP-R-1304Y	T1304	P	●	
NP-R-1411BK	T1411	P	●	
NP-R-1412C	T1412	P	●	Epson ME33/35/330/350;ME Office 535/85ND/560W/ 570W/620F/960FWD;ME32/320/330/ 340;ME Office 360/620F/940FW/960FWD; WorkForce WF-7018
NP-R-1413M	T1413	P	●	
NP-R-1414Y	T1414	P	●	



For use in: Epson

Ninestar Model No.	OEM Model No.	Ink Type	Color	For use in
NP-R-1321BK	T1321	P	●	Epson Stylus T22;Stylus T22/TX120; Stylus N11/NX125
NP-R-1322C	T1322	P	●	Epson Stylus T22/TX120;Stylus N11/NX125
NP-R-1323M	T1323	P	●	
NP-R-1324Y	T1324	P	●	
NP-R-1811BK	C13T18114010	P	●	Epson XP-30/102/202/205/212/215/225/305/312/315/ 322/402/405/412/415/422
NP-R-1812C	C13T18124010	D	●	
NP-R-1813M	C13T18134010	D	●	
NP-R-1814Y	C13T18144010	D	●	
NP-R-1711BK	T1711	D	●	Epson XP-33/103/203/207/303/306/313/413
NP-R-1712C	T1712	D	●	
NP-R-1713M	T1713	D	●	
NP-R-1714Y	T1714	D	●	
NP-R-1631BK	C13T16314010	P	●	Epson WF-2010W/2510WF/2520NF/2540WF/ 2750DWF/2760DWF
NP-R-1632C	C13T16324010	P	●	
NP-R-1633M	C13T16334010	P	●	
NP-R-1634Y	C13T16344010	P	●	
NP-R-0200XLBK	T200XL120	P	●	Epson XP-100/200/300/400/410;WF-2520/2530/2540
NP-R-0200XLC	T200XL220	P	●	
NP-R-0200XLM	T200XL320	P	●	
NP-R-0200XLY	T200XL420	P	●	
NP-R-2011BK	C13T201192	P	●	Epson XP-100/200/300/400;WF-2520/2530/2540
NP-R-2012C	C13T201292	P	●	
NP-R-2013M	C13T201392	P	●	
NP-R-2014Y	C13T201492	P	●	
NP-R-0220XLBK	T220XLBK	P	●	Epson XP-320/420/424; WorkForce WF-2630/2650/2660
NP-R-0220XLC	T220XLC	P	●	
NP-R-0220XLM	T220XLM	P	●	
NP-R-0220XLY	T220XLY	P	●	
NP-R-0220XLBK	T220XLBK	P	●	
NP-R-0220XLC	T220XLC	P	●	
NP-R-0220XLM	T220XLM	P	●	Epson Expression Premium XP-510/520/600/605/ 610/625/700/710/720/800/810/820
NP-R-0220XLY	T220XLY	P	●	
NP-R-2621BK	T2621	D	●	
NP-R-2631PBK	T2631	D	●	
NP-R-2632C	T2632	D	●	Epson XP-600/700/800
NP-R-2633M	T2633	D	●	
NP-R-2634Y	T2634	D	●	
NP-R-0273XLBK	T273XL020	D	●	
NP-R-0273XLPBK	T273XL120	D	●	Epson Expression Home XP-235/245/247/332/335/ 342/345/432/435/442/445
NP-R-0273XLC	T273XL220	D	●	
NP-R-0273XLM	T273XL320	D	●	
NP-R-0273XLY	T273XL420	D	●	
NP-R-2741BK	T2741	D	●	Epson Expression Home XP-235/432
NP-R-2751PBK	T2751	D	●	
NP-R-2752C	T2752	D	●	
NP-R-2753M	T2753	D	●	
NP-R-2754Y	T2754	D	●	

For use in: Epson

Ninestar Model No.	OEM Model No.	Ink Type	Color	For use in
NP-R-2551BK	T2551	D	●	Epson XP-600/700/800
NP-R-2561PBK	T2561	D	●	
NP-R-2562C	T2562	D	●	
NP-R-2563M	T2563	D	●	Epson Expression Photo XP-55/750/760/850/950
NP-R-2564Y	T2564	D	●	
NP-R-2431BK	T2431	D	●	
NP-R-2432C	T2432	D	●	
NP-R-2433M	T2433	D	●	Epson Expression Premium XP-530/630/635/645/830
NP-R-2434Y	T2434	D	●	
NP-R-2435LC	T2435	D	●	
NP-R-2436LM	T2436	D	●	
NP-R-3351BK	T3351	D	●	Epson Expression Photo XP-850
NP-R-3361PBK	T3361	D	●	
NP-R-3362C	T3362	D	●	
NP-R-3363M	T3363	D	●	
NP-R-3364Y	T3364	D	●	
NP-R-0277XLBK	0T277XL120	D	●	
NP-R-0277XLC	0T277XL220	D	●	Epson WorkForce WF-7110DTW/ 7610DWF/3640DTWF
NP-R-0277XLM	0T277XL320	D	●	
NP-R-0277XLY	0T277XL420	D	●	
NP-R-0277XLLC	0T277XL520	D	●	
NP-R-0277XLLM	0T277XL620	D	●	
NP-R-2781BK	T2781	D	●	
NP-R-2782C	T2782	D	●	Epson WorkForce WF-3640DTWF
NP-R-2783M	T2783	D	●	
NP-R-2784Y	T2784	D	●	
NP-R-2785LC	T2785	D	●	
NP-R-2786LM	T2786	D	●	Epson WorkForce WF-7610
NP-R-2791BK	T2791	D	●	
NP-R-2711BK	T2711	D	●	
NP-R-2712C	T2712	D	●	
NP-R-2713M	T2713	D	●	Epson Expression Home XP-235/432
NP-R-2714Y	T2714	D	●	
NP-R-2541BK	T254XLBK	P	●	
NP-R-2531BK	T252XLBK	P	●	
NP-R-2532C	T252XLC	P	●	Epson Expression Home XP-235/432
NP-R-2533M	T252XLM	P	●	
NP-R-2534Y	T252XLY	P	●	
NP-R-0254XLBK	T254XLBK	D	●	
NP-R-0252XLBK	T252XLBK	D	●	Epson Expression Home XP-235/432
NP-R-0252XLC	T252XLC	D	●	
NP-R-0252XLM	T252XLM	D	●	
NP-R-0252XLY	T252XLY	D	●	
NP-R-2991BK	C13T29914010	P	●	Epson Expression Home XP-235/432
NP-R-2992C	C13T29924010	D	●	
NP-R-2993M	C13T29934010	D	●	
NP-R-2994Y	C13T29944010	D	●	
NP-R-2991ABK	C13T299192	P	●	Epson Expression Home XP-235/432
NP-R-2992AC	C13T299292	D	●	
NP-R-2993AM	C13T299392	D	●	
NP-R-2994AY	C13T299492	D	●	



For use in: Epson

Ninestar Model No.	OEM Model No.	Ink Type	Color	For use in
NP-R-1881BK	T1881	D	●	Epson WorkForce WF-7621
NP-R-1882C	T1882	D	●	
NP-R-1883M	T1883	D	●	
NP-R-1884Y	T1884	D	●	
NP-N-5846BK.C.M.Y	T5845-M/T5846	D	●●●●	Epson PictureMate PM200/225/240/260/280/290/300
NP-N-5852BK.C.M.Y	T5852	D	●●●●	Epson PictureMate PM210/215/235/245/250/270/310
NP-E-6531PBK	T653100	P	●	Epson Stylus Pro 4900
NP-E-6532C	T653200	P	●	
NP-E-6533M	T653300	P	●	
NP-E-6534Y	T653400	P	●	
NP-E-6535LC	T653500	P	●	
NP-E-6536LM	T653600	P	●	
NP-E-6537LBK	T653700	P	●	
NP-E-6538MBK	T653800	P	●	
NP-E-6539LLBK	T653900	P	●	
NP-E-653AOR	T653A	P	○	
NP-E-653BG	T653B	P	●	Epson WorkForce Pro WP-4020/4530/4540
NP-E-0676XLBK	T676XL120	P	●	
NP-E-0676XLC	T676XL220	P	●	
NP-E-0676XLM	T676XL320	P	●	
NP-E-0676XLY	T676XL420	P	●	
NP-E-7011BK	T7011	P	●	Epson WorkForce Pro WP-4015DN/4025DW/ 4515DN/4525DNF/4535DWF/4545DTWF/4595DNF
NP-E-7012C	T7012	P	●	
NP-E-7013M	T7013	P	●	
NP-E-7014Y	T7014	P	●	
NP-E-6771BK	T6771	P	●	Epson WorkForce Pro WP-4011/4511/4521/4531
NP-E-6772C	T6772	P	●	
NP-E-6773M	T6773	P	●	
NP-E-6774Y	T6774	P	●	
NP-E-7891BK	T7891	P	●	Epson WorkForce Pro WF-5690DWF/5620DWF/ 5190DW/5110DW
NP-E-7892C	T7892	P	●	
NP-E-7893M	T7893	P	●	
NP-E-7894Y	T7894	P	●	
NP-E-7901BK	T7901	P	●	Epson WorkForce Pro WF-5620DWF/5110DW
NP-E-7902C	T7902	P	●	
NP-E-7903M	T7903	P	●	
NP-E-7904Y	T7904	P	●	

For use in: Brother

Ninestar Model No.	OEM Model No.	Ink Type	Color	For use in
NP-B-0051BK	LC37/51/57/970/1000BK	P	●	Brother DCP-130C/330C/350C;MFC-230C/240C/ 440CN/465CN/3360CN/5460CN/5860CN/665CW/ 685CW/845CW/885CW;FAX-1860C/1960C/2480C
NP-B-0051C	LC37/51/57/970/1000BK	D	●	Brother DCP-130C;MFC-230C/240C/440CN/465CN/ 3360CN/5460CN/5860CN/665CW/685CW/845CW/ 885CW;FAX-1860C/1960C/2480C
NP-B-0051M	LC37/51/57/970/1000BK	D	●	
NP-B-0051Y	LC37/51/57/970/1000BK	D	●	

For use in: Brother

Ninestar Model No.	OEM Model No.	Ink Type	Color	For use in
NP-B-0061BK	LC38/61/67/980/1100BK	P	●	Brother DCP-J125;MFC-J410W/290C/490CW/ 990CW/5490CN/5890CN/6490CW/6890CDW
NP-B-0061C	LC38/61/67/980/1100BK	D	●	
NP-B-0061M	LC38/61/67/980/1100BK	D	●	
NP-B-0061Y	LC38/61/67/980/1100BK	D	●	
NP-B-0985BK	LC39/985BK	D	●	Brother DCP-J125/J315W/J515W; MFC-J265W/J415W/J410
NP-B-0985C	LC39/985BK	D	●	
NP-B-0985M	LC39/985BK	D	●	
NP-B-0985Y	LC39/985BK	D	●	
NP-B-0075BK	LC71/73/75/1220/1240BK	D	●	Brother DCP-J525W/J725DW/J925DW;MFC-J430W/ J432W/J625DW/J825DW/J5910DW/J6510DW/ J6710DW/J6910DW
NP-B-0075XLBK	LC71/73/75/1220/1240BK	D	●	Brother MFC-J425W/J430w/J435W/J625DW/ J825DW/J835DW/J5910DW/J6510DW/J6710DW/ J6910DW
NP-B-0075C	LC71/73/75/1220/1240BK	D	●	
NP-B-0075M	LC71/73/75/1220/1240BK	D	●	
NP-B-0075Y	LC71/73/75/1220/1240BK	D	●	
NP-B-0079BK	LC77/79/BK,LC1280XLBK	P	●	Brother MFC-J5910DW/J6510DW/J6710DW/ J6910DW
NP-B-0079XLBK	LC77/79/BK,LC1280XLBK	P	●	
NP-B-0079C	LC77/79/BK,LC1280XLBK	P	●	
NP-B-0079M	LC77/79/BK,LC1280XLBK	P	●	
NP-B-0079Y	LC77/79/BK,LC1280XLBK	P	●	Brother MFC-J6520DW/J6720DW/J6920DW
NP-B-0129XLBK	LC129XLBK	P	●	
NP-B-0127XLBK	LC127XLBK	D	●	Brother DCP-J4110DW;MFC-J4410DW/J4510DW/ J4610DW/J4710DW
NP-B-0125XLC	LC125XLC	D	●	Brother DCP-J4110DW;MFC-J4410DW/J4510DW/ J4610DW/J4710DW/J6520DW/J6720DW/J6920DW
NP-B-0125XLM	LC125XLM	D	●	
NP-B-0125XLY	LC125XLY	D	●	Brother DCP-J132W/J152W/J552DW/J752DW/ J4110DW;MFC-J470DW/J650DW/J870DW/ J4410DW/J4510DW/J4610DW/J4710DW/J6920DW
NP-B-0123BK	LC123BK	D	●	
NP-B-0123C	LC123C	D	●	
NP-B-0123M	LC123M	D	●	
NP-B-0123Y	LC123Y	D	●	Brother MFC-J4410DW/J4510DW/J4610DW/ J6520DW/J6720DW/J6920DW
NP-B-0105BK	LC105BK	D	●	
NP-B-0105C	LC105C	D	●	
NP-B-0105M	LC105M	D	●	
NP-B-0105Y	LC105Y	D	●	Brother MFC-J450DW/J470DW/J475DW/J650DW/ J870DW/J875DW/J4410DW/J4510DW/J4610DW/ J285DW
NP-B-0103BK	LC103BK	D	●	
NP-B-0103C	LC103C	D	●	
NP-B-0103M	LC103M	D	●	
NP-B-0103Y	LC103Y	D	●	Brother MFC-J6520DW/J6720DW/J6920DW
NP-B-0139XLBK	LC139XLBK	D	●	
NP-B-0137XLBK	LC137XLBK	D	●	Brother MFC-J4410DW/J4510DW/J4710DW; DCP-J4110DW
NP-B-0135XLC	LC135XLC	D	●	Brother MFC-J4410DW/J4510DW/J4710DW/ J6520DW/J6720DW/J6920DW;DCP-J4110DW
NP-B-0135XLM	LC135XLM	D	●	
NP-B-0135XLY	LC135XLY	D	●	Brother MFC-J470DW/J4410DW/J4510DW/ J4710DW/J6520DW;DCP-J4110DW
NP-B-0133BK	LC133BK	D	●	
NP-B-0133C	LC133C	D	●	
NP-B-0133M	LC133M	D	●	
NP-B-0133Y	LC133Y	D	●	



For use in: Brother

Ninestar Model No.	OEM Model No.	Ink Type	Color	For use in
NP-B-0569XLBK	LC569XLBK	D	●	Brother MFC-J3520/J3720InkBenefit
NP-B-0567XLBK	LC567XLBK	D	●	
NP-B-0565XLC	LC565XLC	D	●	Brother MFC-J2310/J2510/J3520/J3720InkBenefit
NP-B-0565XLM	LC565XLM	D	●	
NP-B-0565XLY	LC565XLY	D	●	
NP-B-0563BK	LC563BK	D	●	
NP-B-0563C	LC563C	D	●	
NP-B-0563M	LC563M	D	●	
NP-B-0563Y	LC563Y	D	●	Brother DCP-J100/J105;MFC-J200
NP-B-0529XLBK	LC529XLBK	P	●	
NP-B-0525XLC	LC525XLC	D	●	
NP-B-0525XLM	LC525XLM	D	●	
NP-B-0525XLY	LC525XLY	D	●	Brother MFC-J480DW/J485DW/J680DW/J880DW/J885DW
NP-B-0201BK	LC201BK	D	●	
NP-B-0201C	LC201C	D	●	
NP-B-0201M	LC201M	D	●	
NP-B-0201Y	LC201Y	D	●	Brother DCP-J562DW;MFC-J480DW/J880DW
NP-B-0221BK	LC221BK	D	●	
NP-B-0221C	LC221C	D	●	
NP-B-0221M	LC221C	D	●	
NP-B-0221Y	LC221Y	D	●	Brother MFC-J480DW/J485DW/J680DW/J880DW/J885DW/J4420DW/J4320DW/J4620DW/J5520DW/J5620DW/J5720DW
NP-B-0203BK	LC203BK	D	●	
NP-B-0203C	LC203C	D	●	
NP-B-0203M	LC203M	D	●	
NP-B-0203Y	LC203Y	D	●	Brother MFC-J5520DW/J5620DW/J5720DW
NP-B-0209BK	LC209BK	P	●	
NP-B-0207BK	LC207BK	D	●	Brother MFC-J4420DW/J4320DW/J4620DW/J5520DW/J5620DW/J5720DW
NP-B-0205C	LC205C	D	●	
NP-B-0205M	LC205M	D	●	
NP-B-0205Y	LC205Y	D	●	
NP-B-0223BK	LC223BK	D	●	Brother MFC-J480DW/J880DW/J4420DW/J4620DW/J4625DW/J5320DW/J5620DW/J5625DW/J5720DW; DCP-J562DW/J4120DW
NP-B-0223C	LC223C	D	●	
NP-B-0223M	LC223M	D	●	
NP-B-0223Y	LC223Y	D	●	
NP-B-0229XLBK	LC229XLBK	P	●	Brother MFC-J5320DW/J5620DW/J5625DW/J5720DW
NP-B-0227XLBK	LC227XLBK	D	●	Brother MFC-J4420DW/J4620DW/J4625DW; DCP-J4120DW
NP-B-0225XLC	LC225XLC	D	●	Brother MFC-J4420DW/J4620DW/J4625DW/J5320DW/J5620DW/J5625DW/J5720DW; DCP-J4120DW
NP-B-0225XLM	LC225XLM	D	●	
NP-B-0225XLY	LC225XLY	D	●	
NP-B-0233BK	LC233BK	D	●	Brother MFC-J4620DW/J5320DW/J5720DW; DCP-J4120DW
NP-B-0233C	LC233C	D	●	
NP-B-0233M	LC233M	D	●	
NP-B-0233Y	LC233Y	D	●	
NP-B-0239XLBK	LC239XLBK	P	●	Brother MFC-J5320DW/J5720DW
NP-B-0237XLBK	LC237XLBK	D	●	Brother MFC-J4620DW;DCP-J4120DW
NP-B-0235XLC	LC235XLC	D	●	Brother MFC-J4620DW/J5320DW/J5720DW; DCP-J4120DW
NP-B-0235XLM	LC235XLM	D	●	
NP-B-0235XLY	LC235XLY	D	●	

For use in: Brother

Ninestar Model No.	OEM Model No.	Ink Type	Color	For use in
NP-B-0663BK	LC663BK	D	●	Brother MFC-J2320/J2720
NP-B-010EBK	LC10EBK	P	●	Brother MFC-J6925DW
NP-B-010EC	LC10EC	D	●	
NP-B-010EM	LC10EM	D	●	
NP-B-010EY	LC10EY	D	●	
NP-B-012EBK	LC12EBK	P	●	
NP-B-012EC	LC12EC	D	●	
NP-B-012EM	LC12EM	D	●	Brother MFC-J5920DW
NP-B-012EY	LC12EY	D	●	
NP-B-020EBK	LC20EBK	P	●	
NP-B-020EC	LC20EC	D	●	
NP-B-020EM	LC20EM	D	●	
NP-B-020EY	LC20EY	D	●	
NP-B-022EBK	LC22EBK	P	●	
NP-B-022EC	LC22EC	D	●	
NP-B-022EM	LC22EM	D	●	
NP-B-022EY	LC22EY	D	●	

For use in: HP

Ninestar Model No.	OEM Model No.	Ink Type	Color	For use in
NP-H-0980BK	D8J10A	P	●	HP Officejet Enterprise Color X555dn/X585dn
NP-H-0980C	D8J07A	D	●	
NP-H-0980M	D8J08A	D	●	
NP-H-0980Y	D8J09A	D	●	
NP-H-0970BK	CN621AM	P	●	HP Officejet Pro X576dw/X476dn/X551dw/X451dw/X451dn/X476dw
NP-H-0970XLBK	CN625AM	P	●	
NP-H-0971XLC	CN626AM	D	●	
NP-H-0971XLM	CN627AM	D	●	
NP-H-0971XLY	CN628AM	D	●	HP Officejet Pro 8100/8600/8600Plus/8610/8615/8620/8625/8630/8640/8660/251dw/276dw
NP-H-0950XLBK	CN045AN	P	●	
NP-H-0951XLC	CN046AN	D	●	
NP-H-0951XLM	CN047AN	D	●	
NP-H-0951XLY	CN048AN	D	●	HP Officejet 6100/6600/6700/7110/7510/7512/7610/7612
NP-H-0932XLBK	CN053AN	P	●	
NP-H-0933XLC	CN054AN	D	●	
NP-H-0933XLM	CN055AN	D	●	
NP-H-0933XLY	CN056AN	D	●	HP Officejet 6820/6815/6810/6812 eAIO; Officejet 6220/Pro 6230 ePrinter; Officejet Pro 6835/6830 eAIO
NP-H-0934XLBK	C2P23AN	P	●	
NP-H-0935XLC	C2P24AN	D	●	
NP-H-0935XLM	C2P25AN	D	●	
NP-H-0935XLY	C2P26AN	D	●	HP Photosmart B8550/C5324/C5370/C5373/C5380/C5383/C5388/C5390/C5393/C6324/C6380/D5460/D5463/D7560 eAIO;Photosmart B010a/B109a/B109b/B109f/B109n/B110a/B110c/B110e/B111a/B209a/B209c/B210a/B210c/B210d/C309a/C309g/C310a/C310b/C310c/C410b/C510a/C510c;Photosmart 5510/5512/5514/5515/5520/5522/5524/6510/7510/7515 eAIOPrinter;Deskjet 3070A eAIO
NP-H-0684EXLBK	CN684E	P	●	
NP-H-0364XLPBK	CB322E	P	●	
NP-H-0364XLC	CB323E	D	●	
NP-H-0364XLM	CB324E	D	●	
NP-H-0364XLY	CB325E	D	●	



For use in: HP

Ninestar Model No.	OEM Model No.	Ink Type	Color	For use in
NP-H-0711XLBK	CZ133A	P	●	HP Officejet 6820/6815/6810/6812 eAIO; Officejet 6220/Pro 6230 ePrinter; Officejet Pro 6835/6830 eAIO
NP-H-0711C	CZ130A	D	●	
NP-H-0711M	CZ131A	D	●	
NP-H-0711Y	CZ132A	D	●	
NP-H-0920XLBK	CD975AN	P	●	HP Designjet T120/T520 ePrinter
NP-H-0920XLC	CD972AN	D	●	
NP-H-0920XLM	CD973AN	D	●	
NP-H-0920XLY	CD974AN	D	●	

For use in: Lexmark

Ninestar Model No.	OEM Model No.	Ink Type	Color	For use in
NP-L-0100XLBK	100ABK/100XLBK/100XLABK/ 108BK/105XLBK	P	●	Lexmark Prospect Pro205/sePro208;Impact S305/ ses308;Interpret S405/seS408;Intuition S505; Interact S605/seS608;Platinum Pro905; Prestige Pro805;Prevail Pro705;Pinnacle Pro901; Intuitimses 508;Genesis S815
NP-L-0100XLC	100AC/100XLC/100XLAC/108C	D	●	
NP-L-0100XLM	100AM/100XLM/100XLAM/108M	D	●	
NP-L-0100XLY	100AY/100XLY/100XLAY/108Y	D	●	
NP-L-0150XLBK	155XLBK/150XLBK	P	●	Lexmark Pro715/915;S315/S415/S515
NP-L-0150XLC	150XLC	D	●	
NP-L-0150XLM	150XLM	D	●	
NP-L-0150XLY	150XLY	D	●	
NP-L-0200XLBK	200XLBK/200BK	P	●	Lexmark Office Edge Pro4000/4000c/5500/5500t
NP-L-0200XLC	200XLC/200C	P	●	
NP-L-0200XLM	200XLM/200M	P	●	
NP-L-0200XLY	200XLY/200Y	P	●	

For use in: Kodak

Ninestar Model No.	OEM Model No.	Ink Type	Color	For use in
NP-K-0010XLBK	KP/N3J8965	D	●	Kodak Easyshare 5100/5300/5500ESP3/ESP5/ESP7/ ESP9/ESP3250/ESP5250/ESP6150/ESP7250/ ESP9250;Hero6.1/7.1/9.1
NP-K-0010XLBK/C/ M/GL/Y	KP/N3J8966	D	●●●●	
NP-K-0030XLBK	Kodak30BK	P	●	Kodak ESP C110/C310/C315;Office2170;Hero3.1/ 4.2/5.1Allinone
NP-K-0030XLC.M.Y	Kodak30CMY	D	●●●	
NP-K-0A10BK	ABK10	P	●	Kodak ADVENT AW10/A10
NP-K-0A10C.M.Y	ACLR10	D	●●●	

